


SADDLE FITTING AND ADJUSTMENT

FITTING THE SADDLE TO THE SEATPOST

Slide the Pentaclip onto the seatpost, positioning it about halfway up the small top section of the seatpost (fig. 1) above the O-rings, to ensure enough clearance from the saddle to the seatpost.

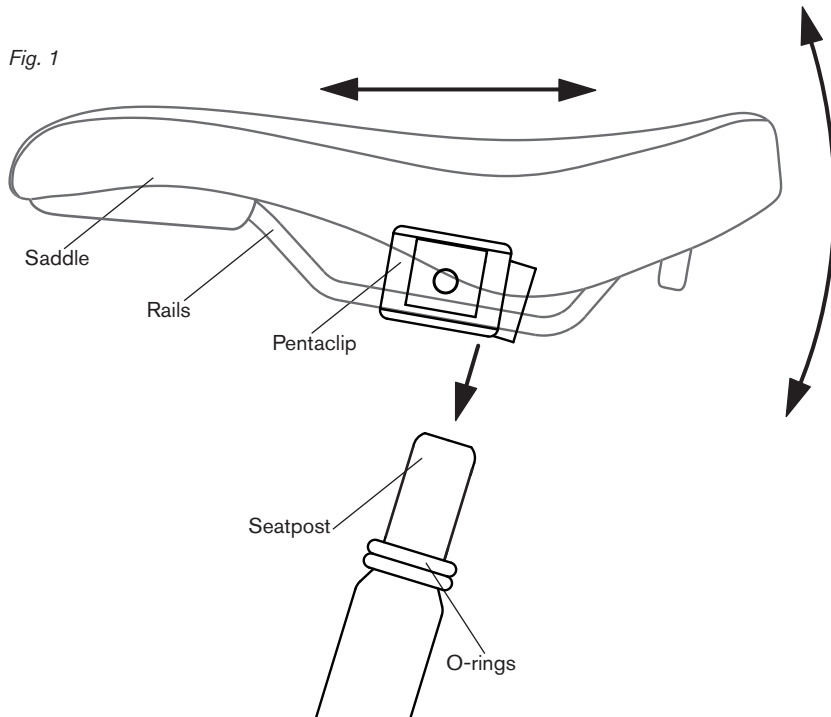

ADJUSTING THE SADDLE POSITION

The angle and fore-aft position of the saddle can both be adjusted (fig. 1). To establish the most comfortable position you should start by adjusting the saddle into a neutral position; you can then work from there to find the best position for you.

Move the saddle rails so that they are roughly half way between maximum fore and aft position. Adjust the saddle angle into a level position. Tighten the Pentaclip bolt to 15Nm.

Ride the bike to test the saddle position, you can adjust it to make it more comfortable if necessary.

To remove the saddle, undo the bolt on the pentaclip 2-3 turns with a 5mm hex key. You can then slide the pentaclip and saddle up and off the seatpost.

